



multimobile

Quickstart



DUALSIM PDA



DUALSIM PDA Multi Mobile™

Quick Start

Version 1.0

© Multi Mobile B.V., 2008

No part of this publication may be reproduced in any form by print, photo print, microfilm or any other means without written permission by Multi Mobile B.V.

© 2008 Multi Mobile™

Phone and items in the box



Overview of phone and buttons

Front and left side view



No.	Item	Function
1	Notification LED	Bi-color LED Power indicator, battery charging status.
2	Receiver	Listen to audio media or phone calls.
3	Touch Screen	Use to write, draw, or make selections with the stylus.
4	Talk Button (G1 and G2 Button)	<p>Press and hold G1 or G2 button to open the Wireless Manager on the today screen.</p> <p>Press G1 or G2 button to answer an incoming call.</p> <p>In double cards mode while the dialing phone number or name shows on the screen, press G1 button to dial with card1 or press G2 button to dial with card2; While no dialing phone number or name, press G1 or G2 button to open the phone screen; While incoming calls are at the same time, press G1 button to get the call with card1 and press G2 button to get the call with card2; While a card is talking, can't dial from another card.</p> <p>In single card mode the function of the G1 button and G2 button are in the same.</p>
5	Left Soft Key	Performs the command shown in the label above the button.
6	Navigation Pad	Press the navigation pad to scroll left, right, up or down on the display; press the Action (center) button to enter a selection.
7	Right Soft Key	Performs the command shown in the label above the button.
8	End Button	Press this button to end a call or return to the Today screen. Press this button to end the highlight call while the incoming calls are at the same time.
9	OK Button	Press this button to exit the current performance.
10	Start Menu Button	Press this button to active your Start Menu.
11	Microphone	Do not cover the microphone with your hand during phone call.
12	Sync Connector	You can insert USB cable or AC adapter or headset provided with the device to this connector.
13	Volume Buttons	Press volume buttons to adjust the volume.

Back and right side view



No.	Item	Function
14	Zoom button	Use this button you can adjust the lens to Micro mode.
15	Self Shutter Mirror	Use it when you take a picture for yourself.
16	Camera Lens	Use this built-in camera to take photos or video clips.
17	External Speaker	Allows you to listen to audio media or hands-free calls.
18	Cover Latch	Slide this latch to release the battery cover.
19	Micro SD Card Slot	Insert a storage card (Micro SD) for storing data.
20	Power Button	Press this button to turn off your device temporarily and switches the device to sleep mode; press and hold this button to turn off your device completely. When your device is in sleep mode, you can still receive calls; however, the phone function is off when you turn off the device completely.
21	RESET Button	With the stylus press the RESET button to soft-reset your device.
22	Camera Button	Press to launch the camera. Press again to take a picture.
23	Stylus	Use the stylus to write, draw, or select items on the touch screen.

LED indicators

The various colors that might display in the LED Indicator area are summarized here.

LED Status	Status
Green blinking	Have SIM card and find network without charging.
Solid Red	The battery is charging or the phone is using ActiveSync to synchronize with a PC.
Red blinking	There are unread messages or missed calls or notification or speak on during a call.

Tap **Start > Settings > Sounds & Notifications > Notifications** tab where you can set the flash light for other events. Select an event and make a tick for **Flash light for**, then press OK button to save it. It will flash red light while the event comes.

Tap **Start > Settings > System** tab > **Power > Power Saving** tab and make the tick off for **Turn on LED light**, and you can turn off LED light.


Step-by-step setup of phone

Installing and removing the battery

The battery must be fully charged before you use your phone for the first time. The battery can be charged with the phone turned on or off.

Removing the battery

1. Always switch the device off, and disconnect the charger before removing the battery.
2. Press the cover latch and slide down to remove the back cover which contains the battery.

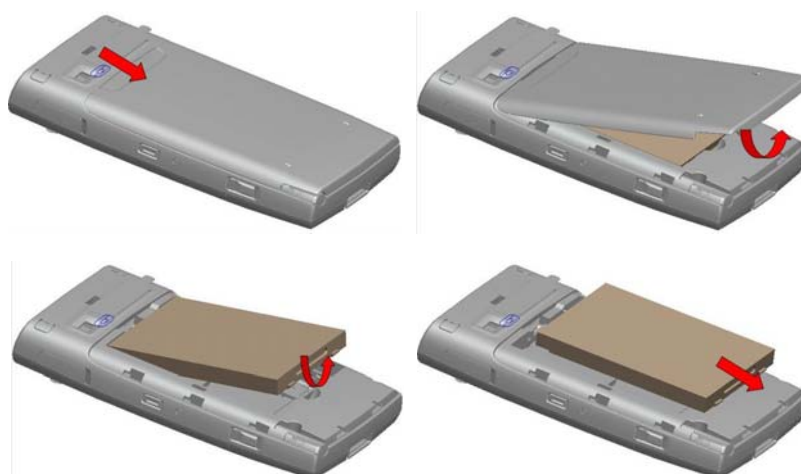


Installing the battery

Align the exposed metal contacts inside the battery with the prongs in the body of the phone and gently push the bottom of the battery into place.

SIM and MicroSD card

Inserting the SIM card

1. Follow the instructions for removing the back cover which contains the battery.
2. Insert the SIM card into the SIM card slot with its gold contacts facing down. The cut-off corner of the SIM card should match the cut-off corner in the device.

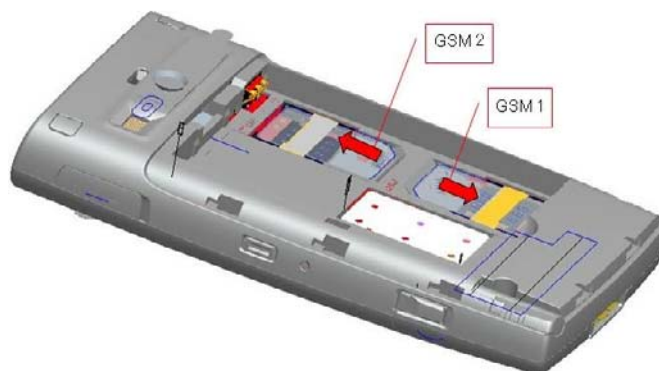

Inserting a MicroSD card

Use only micro Secure Digital (MicroSD) cards in your device's memory card slot. You can install the storage card to store images, video clips, music and other data in your phone.

1. Slide the MicroSD card into the holder, with the gold-plated contacts facing upwards and pushed in first.
2. Push the card down into the device. You will hear a click sound when it is locked into place.

Switching your phone on and off

Turning on your phone

The power button location is indicated in page 5. Press and hold the power button for several seconds to switch your phone on and off.

Making a phone call

1. Ensure your SIM card is installed and the battery is fully charged.
2. From the Today Screen - Enter the phone number by dialing the number on the keypad and press the Talk button (indicated in the phone overview section) to initiate the call.
3. From any other screen – Press the Talk button to go to the phone application, then enter the phone number by dialing the number of the keypad and press the Talk button to initiate the call.
4. You may also search your contacts for the person you wish to call and then tap & hold the contact & select “Call Work”, “Call Home” or “Call Mobile” whatever the case may be.

Ending a call

Press the End button to finish the call.

Camera and Video Recorder

Your Smartphone is equipped with a digital camera that can record both still pictures and moving images.



Capturing a picture

To launch Camera, you may press the Camera button on the side of the device or tap **Start > Programs > Camera**.

In the middle of screen you will see the current image being seen by the camera. To capture the picture, press the Camera button on the side of the device or the center button of the Navigation pad. You will hear a shutter sound and the picture will be saved.

Capturing a video

You can start the Video Recorder function by going to **Start > Programs > Camera**, and then press **Menu > Mode > Video**

Press the center button of the Navigation pad or the Camera button on the side of the device to start recording. Press the center button of the Navigation pad or the Camera button again to stop.

- You can press **Menu > Setting** to enactment the time limited of Video Recorder
- The maximum length of video capture is determined by the amount of free memory of the device, or the storage card to which you are saving.


Micro Mode

You can adjust the zoom button on the back of the device (indicated in the phone view page) to allow you to choose between Micro mode for close-up shots & for use with “WorldCard Mobile” business card recognition (flower icon – left selection), or normal mode for regular pictures & video (hill icon – right selection).

Using Pictures & videos

You can view pictures stored in your phone or storage card using the Pictures & Videos application.

From here you can also select a picture to set as the background for your Today Screen or you may send the picture to others.

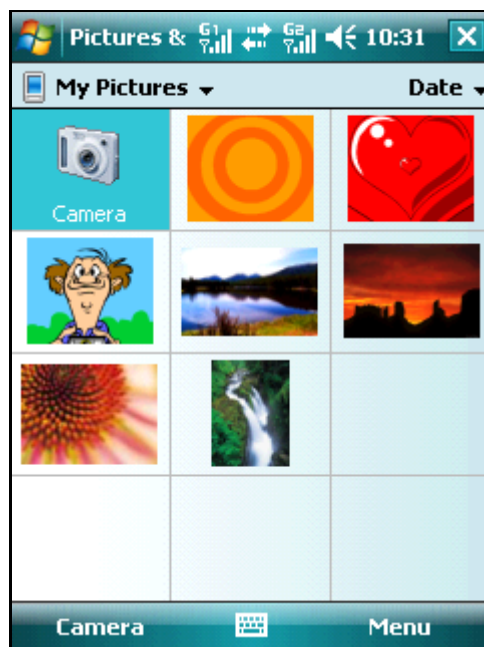

Previewing pictures

To start the program, go to **Start > Programs> Pictures & Videos**

After you enter Pictures & videos, you will see an on-screen preview of all pictures stored on both your phone and memory card.

- Click on any picture to zoom in on it.
- On the preview screen, press navigation keys to preview previous/next picture in turn.
- Using either the “menu” soft key, or tapping and holding on any picture, you can perform functions such as sending, beaming, saving to contact, deleting or editing your pictures.

More Information

For more instructions, refer to the User Manual or tap **Start > Help** on your device for on-device help.

